

Table of Contents

2 Purpose of this guide

General safety
Handling safety
Installation safety
Fire safety

5 Product Identification

6 Mechanical Installation

Selecting the location
General installation
Installation method
Attachment guidelines

11 Electrical Installation

General installation
Grounding

14 Maintenance

- * **Please read carefully. This document is binding for any warranty case.**
- * **Any installed PV system less than 500m from coastline, please refer to the Near-coast installation manual.**

**Global Installation Guide for
Suntech Power Photovoltaic Module**

Version 20160101

Purpose of this guide

- This guide contains information regarding the installation and safe handling of Wuxi Suntech Power Co., Ltd photovoltaic module (hereafter referred to as “module”). Wuxi Suntech Power Co., Ltd referred to as “Suntech”.
- Installers must read and understand this guide prior to installation. For any questions, please contact Suntech's Global Quality & Customer Support department or our local representatives for more detailed information. Installers must follow all safety precautions as described in this guide as well as local requirement and regulations by law or authorised organisations.
- Before installing a solar photovoltaic system, installers should familiarize themselves with its mechanical and electrical requirements. Keep this guide in a safe place for future reference (care and maintenance) and in case of sale or disposal of the modules.
- Suntech modules are tested and certified for installation worldwide. Different regions may have different regulations for solar PV installations. In this guide, hereafter "IEC Only" is used to refer to regions where IEC standard applies, e.g. Europe, Middle East, most of Asia Pacific countries; " UL Only " is used to refer to regions where UL standard applies, e.g. United States, Canada; all other references are global.

General safety

- Modules that fall under this application class may be used in system operation at more than 50V DC or 240W, where general contact access is anticipated. Modules qualified for safety under IEC 61730-2 and within this application class are considered to meet the requirements for Safety Class II. (IEC Only)
- Installing solar photovoltaic systems requires specialized skills and knowledge. Installation must only be performed by qualified personnel.
- Installers must assume all risks of injury that might occur during installation, including, but not limited to, the risk of electric shock.
- One single module may generate more than 30V DC when exposed to direct sunlight. Contact with a DC voltage is potentially hazardous and should be always avoid.
- Do not disconnect the modules or any electrical part under load.
- PV modules generate electricity when exposed to sunlight. Number of modules string connected can cause lethal shock and burn hazards. Only authorized and trained person should have access to the modules.
- Photovoltaic solar modules convert light energy to direct current electrical energy. They are designed for outdoor use. Modules can be ground mounted, mounted on rooftops, vehicles or boats. The proper design of support structures lies within the responsibility of the system designers and installers.
- When installing the system, abide to all local, regional and national statutory regulations. Obtain a building permit if necessary.
- The electrical characteristics are within ± 10 percent of the indicated values of I_{sc} , V_{oc} and P_{max} under standard test conditions (irradiance of 1000 W/m^2 , AM 1.5 spectrum, and a cell temperature of 25°C (77°F)).

Purpose of this guide

- Only use equipment, connectors, wiring and support frames suitable for solar electric systems.
- Do not use mirrors, other magnifiers or artificially concentrated sunlight onto the modules.
- Always use fall protection equipment when working from heights of 6 feet (183cm) or above. Follow Occupational Safety and Health Act (OSHA) or local governing safety regulations regarding Fall Protection. (UL Only)
- Do not sit, stand, step or walk on any side of the module, including the frames.
- Do not permit any part of the module(s) to be submerged or allow for constant water to soil the module(s) unless it's natural rain fall or periodic cleaning.
- Do not permit constant dew on any part of backsheet of the module.

Handling safety

- Do not lift the module by grasping the module's junction box or electrical leads.
- Do not drop the module or allow objects to fall on the module.
- Do not place any heavy or sharp objects on the module.
- Be cautious when placing the module down onto a surface, particularly when placing it in a corner.
- Inappropriate transport and installation may break the module and void the warranty.
- Do not attempt to disassemble the modules, and do not remove any attached nameplates or components from the modules.
- Do not apply paint or adhesive to the module top surface or backsheet.
- To avoid damage to the backsheet and cells, do not scratch, dent or hit the backsheet. During the transportation, do not to apply direct pressure on the backsheet or front glass.
- Do not drill holes in the frame. This may compromise the frame strength, cause corrosion of the frame and void the warranty.
- Do not scratch the anodized coating of the frame (except for grounding connections at the grounding connection point on the back side of the module). It may cause corrosion of the frame or compromise the frame strength.
- A module with broken glass or torn backsheet cannot be repaired and must not be used since contact with any module surface or the frame can cause an electric shock.
- Work only under dry conditions, and use only dry tools. Do not handle modules under wet conditions unless wearing appropriate protective equipment.
- When storing uninstalled modules outdoors for any period of time, always cover the modules and ensure that the glass faces down on a soft flat surface to prevent water from collecting inside the module and causing damage to exposed connectors.

Installation safety

- Never open electrical connections or unplug connectors while the circuit is under load.
- Contact with electrically charged parts of the modules, such as terminals, can result in burns, sparks and lethal shock whether or not the module is connected.
- Do not touch the PV module unnecessarily during installation. The glass surface and the frame may be hot; there is a risk of burns and electric shock.
- Do not work in the rain, snow or in windy conditions.
- Avoid exposing cables and connectors to direct sunlight and scratches or cuts in order to prevent insulation degradation.
- Use only insulated tools that are approved for working on electrical installations.
- Keep children well away from the system while transporting and installing mechanical and electrical components.
- Completely cover the module with an opaque material during installation to prevent electricity from being generated.
- Do not wear metallic rings, watchbands, earrings, nose rings, lip rings or other metallic objects while installing or troubleshooting photovoltaic systems.
- Follow the safety regulations(eg. safety rules for working on electrical power plant stations) of your regions and for all other system components, including wires and cables, connectors, charging regulators, inverters, storage batteries, rechargeable batteries, etc.
- Under normal conditions, a photovoltaic module is likely to experience conditions that produce more current and/or voltage than reported at standard test conditions. Accordingly, the values of Isc and Voc marked on this module should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor current ratings, minimum factor of fuse sizes, and size of controls connected to the PV output.
- Only use same connectors to connect modules to form a string, or connect to another device. Removing the connectors will void the warranty.

Fire Safety

- Consult your local authority for guidelines and requirements for building or structural fire safety.
- Roof constructions and installations may affect the fire safety of a building; improper installation may create hazards in the event of a fire.
- Use components such as ground fault circuit breakers and fuses as required by local authority.
- Do not use modules near equipment or in places where flammable gases may be generated.
- The modules have been rated Fire Class C, and are suitable for mounting on to a Class A roof.

Each module has three labels providing the following information:

1. Nameplate: describes the product type; rated power, rated current, rated voltage, open circuit voltage, short circuit current, all as measured under standard test conditions; weight, dimensions etc.; the maximum system voltage is 600 volts or 1000 volts depending on the product family DC for UL standard and 1000 volts DC for IEC standard. Depending on the products some are UL/IEC listed to 1 000 volts while other UL products are 600 volts. Check your nameplate or contact your local representative for details.

2. Barcode: each individual module has a unique serial number. The serial number has 18 digits. The 15th and the 16th digits are the week code, and the 17th and the 18th digits are the year code. For example, STP xxxxxxxxxxxx2414 means the module was assembled and tested in the 24th week of 2014. Each module has only one bar code. It is permanently attached to the interior of the module and is visible from the top front of the module. This bar code is inserted prior to laminating.



Typical serial number barcode label

3. Sorting label: four different marks are shown on this sticker. "QC Pass" assures that the module has passed the quality control examination. "HIPOT" means that it has passed the insulation test. Finally modules are sorted out according to their output current, referred as a corresponding symbol "Ix" attached, in which x takes the value 1, 2 or 3(I3 marks physically the highest current). To get optimal performance out of a string of modules it is recommended to connect only modules of the same "Ix" class (for example only I2 modules) in one given string. The function of the "Barcode" please refer to the "Barcode" instruction mentioned above.



Sorting label

Do not remove any labels. Removing a label will make the Suntech warranty void.

Selecting the location

- Select a suitable location for installing the modules.
- The modules should face south in northern latitudes and north in southern latitudes.
- For detailed information on the best installation angle, refer to standard solar photovoltaic installation guides or consult a reputable solar installer or systems integrator.
- Modules should not be shaded at any time. If a module is shaded or even partially shaded, it will fail to perform at ideal conditions and result in lower power output. A permanent and/or regular shade on the module voids the warranty.
- This installation manual is applicable for all pv system of 500 m or more away from the coastline. If you need to install your system less than 500m from the coast line please refer to Near-coast installation manual (www.suntech-power.com) or contact Suntech's Customer Support department or our regional representatives.
- Do not use modules near equipment or in locations where flammable gases may be generated or collected.

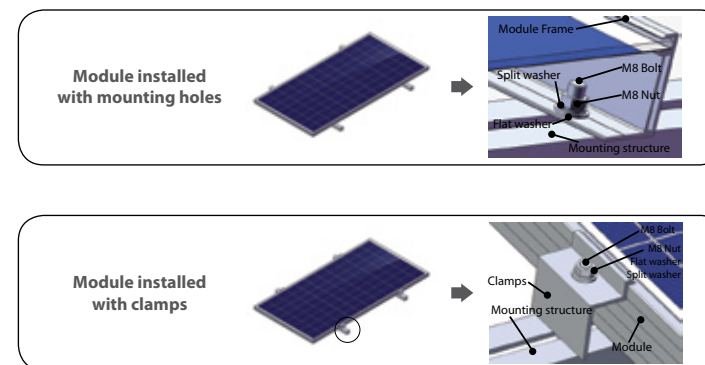
General Installation

- Before installing modules check for any optical deviations. Any optical deviations noticed after system installed may void warranty. Any potential costs for labor, material or other cost such as documentation, safety or performing the (de/ re-) installation will not be covered.
- The module mounting structure must be made of durable, corrosion-resistant and UV-resistant material. Always use a tested and certified mounting structure approved for your system design.
- In regions with heavy snowfall in winter, select the height of the mounting system so that the lowest edge of the module is not covered by snow for any length of time. In addition, ensure that the lowest portion of the module is placed high enough so that it is not shaded by plants, trees or damaged by ground soil moved by or through the air.
- For ground mounting systems, the minimum distance Suntech recommend from the ground to the bottom of the module is at least 24 inches (60cm).
- Modules must be securely attached to the mounting structure. For Clamping System installation methods, the recommended maximum compression for each clamp is 2900 PSI (20 Mpa) in order to avoid potential damages to module frames. Follow the instruction of the clamping system supplier.
- Provide adequate ventilation under the modules in conformity to your local regulations. A minimum distance of 10 cm between the roof plane and the frame of the module is generally recommended.
- Always observe the instructions and safety precautions included with the module support frames.

- Before installing modules on a roof, always ensure the roof construction is suitable. In addition, any roof penetration required to mount the module must be properly sealed to prevent leaks.
- Dust building up on the surface of the module can impair with the module performance. The modules shall be installed with a tilt angle no less than 10 degrees, making it easier for dust to be removed by rain. A flat angle requires more frequent cleaning.
- Observe and take into account the linear thermal expansion of the module frames (the recommended minimum distance between two modules is 2 cm).
- Always keep the front and backsheets of the module free from foreign objects, plants and vegetation, structural elements, which could come into contact with the module, especially when the module is under mechanical load.
- When installing a module on a pole, select a pole and module mounting structure that will withstand the anticipated wind load and snow load for the area.
- Ensure modules are not subjected to wind or snow loads exceeding the maximum permissible loads, and are not subject to excessive forces due to the thermal expansion of the support structures. Never allow modules overlap or exceeds the rooftop: Refer to the following installation methods for more detailed information.

Installation methods

- Modules can be installed on the frame using mounting holes, clamps* or an insertion system. Modules must be installed according to the following examples. Not mounting the modules according to these instructions may void the warranty.



* The minimum recommended length for each clamp is 50 mm.









- Module can be installed in both landscape and portrait modes.
- The modules must be properly secured to their support so that they can withstand live load conditions, including wind uplift, to the pressure they have been certified for. It is the installer's responsibility to ensure that the clamps used to secure the modules are strong enough.

Attachment guidelines

- Select the proper installation method depending on the load(See below for more detailed information).
- With different installation methods, the modules have been tested to withstand the loads of 2400 Pa, 3800 Pa and 5400 Pa according to IEC 61215 standard, equivalent of 1600 Pa(0.232psi), 2500 Pa(0.363psi) and 3600 Pa(0.522psi) respectively under UL 1703 standard.
- The diagrams in the tables below are designed for illustration purpose. For each installation, modules can be installed either in portrait or landscape mode. If you integrate our obsolete products and need advice, please contact Suntech Global Customer Support Department for installation instructions based on older manuals.

Suntech Module Type	Module Dimension Length×Width×Thickness
T Series	1324 mm×992 mm× 35 mm
W Series	1640 mm×992 mm×35 mm
V Series	1956 mm×992 mm×40 mm

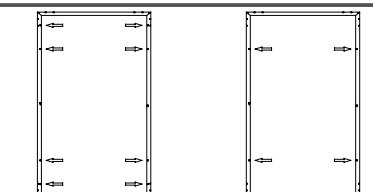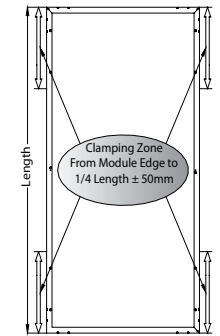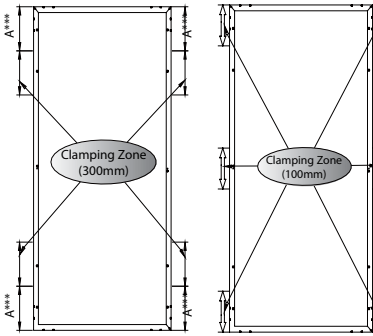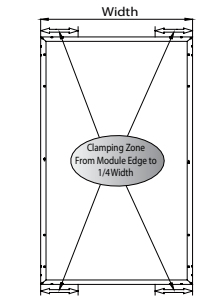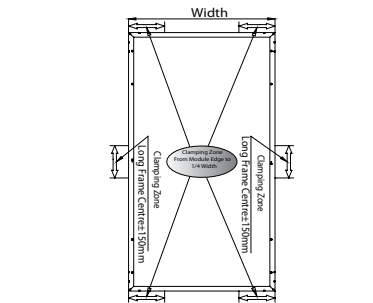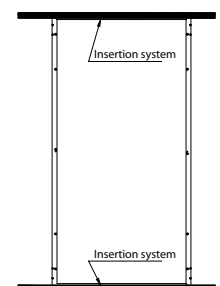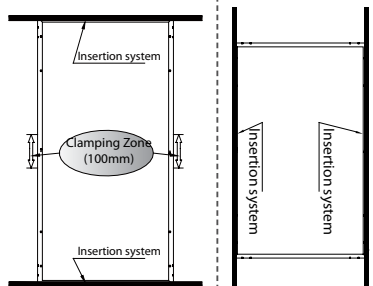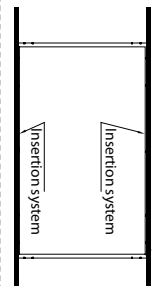Suntech T series, W series, V series module

	2400 Pa Load * 2400 Pa Wind Load 2400 Pa Snow Load	3800 Pa Load * 3800 Pa Wind Load 3800 Pa Snow Load	5400 Pa Load * 5400 Pa Snow Load 3800 Pa Wind Load
Mounting system			 <p>Use eight mounting holes (Exclude Ve) Use four mounting hole</p>
Clamping system ** Attachment to the long frame	 <p>Use four clamps</p>		 <p>Use four clamps Use six clamps</p>
Clamping system ** Attachment to the short frame	 <p>Use four clamps on short frame</p>		 <p>Use four clamps on the short frame and two clamps at the center of each long frame</p>
Insertion System	 <p>Use insertion system on short frame</p>		 <p>Use insertion system on a short frame and two clamps at the center of each long frame</p>  <p>Use an insertion system on a long frame</p>

Electrical Installation

General installation

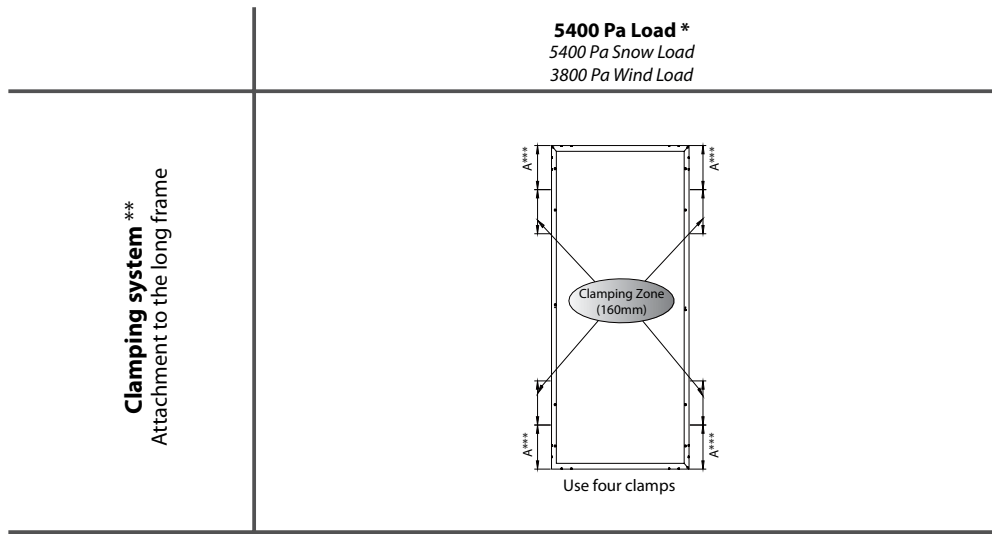
- Any hardware used must be compatible with any other used material to avoid galvanic corrosion. Defects caused by corrossions void the warranty.
- It is not recommended to use modules with different configurations (grounding, wiring) in the same system.
- Excessive cables must be organized or fixed in an adequate way, e.g. attached to the mounting structure by using non-metallic cable ties. Solar cables, connectors and junction boxes should not be exposed to water exposure, and snow, and rain or water submersion for a long period of time(IP65/67/68).
- For applications requiring high operating voltage several modules can be connected in series to form a string of modules; the system voltage is then equal to the sum of the voltage of each module.
- For applications requiring high operating currents several strings of modules can be connected in parallel; the system current is then equal to the sum of the current of each string of modules.
- The maximum system voltage is 600 volts or 1000 volts depending on the product family DC according to standards.
- The maximum number of series connected modules depends on system design, the type of inverter used and environmental conditions.
- Based on the maximum series fuse rating of module and local electrical installation code, always make sure Suntech PV modules are assembled with the appropriate string fuse for circuit protection.
- There is no specific limitation on the number of modules that can be connected in parallel, the number of modules is determined by system design parameters such as current or power output.
- To prevent the cables and the connectors from overheating, the cross section of the cables and the capacity of the connectors must be selected to suit the maximum system short circuit current. The recommended cable is PV wire with a cross section of at least 4mm².
- Caution: do not secure the cables too tight. Any cable damage caused by cable management system is not covered under Suntech's warranty.
- Always refer to the cable manufacturer's bending radius which includes the radius just behind the connectors.
- When designing large modules arrays connected to a single inverter, always take into account the resulting isolation resistance (Riso), which decrease increasing the number of modules in the array. A too low Riso can results in inverter faults.

* The loads of 2400 Pa, 3800 Pa and 5400 Pa are under IEC standard. The installation methods applicable for 5400 Pa are also relevant for 3800 Pa and 2400 Pa. The installation methods applicable for 3800 Pa are also relevant for 2400 Pa.

** The module clamps must not come into contact with the front glass or deform the frame in any way. Avoid shading effects from the module clamps and insertion systems. Drainage holes in the module frame must not be closed or obscured by the clamps.

*** Measurement A stands for the distance from the module edge to the clamping zone. Measurement A is 150mm for T series 35 mm thickness, 180mm for W series 35mm thickness, 280mm for V series 40mm thickness. The clamping zone defines the range for the middle point of the clamp.

Suntech W series AC module



* The loads of 3800 Pa and 5400 Pa are under IEC standard. The installation methods applicable for 5400 Pa are also relevant for 3800 Pa and 2400 Pa. The installation methods applicable for 3800 Pa are also relevant for 2400 Pa.

** The module clamps must not come into contact with the front glass or deform the frame in any way. Avoid shading effects from the module clamps and insertion systems. Drainage holes in the module frame must not be closed or obscured by the clamps.

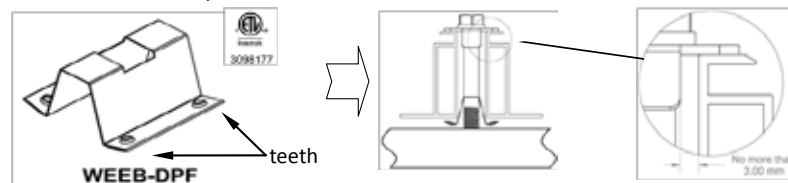
*** Measurement A stands for the distance from the module edge to the clamping zone. Measurement A is 320 mm for AC module. The clamping zone defines the range for the middle point of the clamp.

- Please refer to local regulations to determine the system wires size, type and temperature.
- Suntech modules are supplied with connectors used for system electrical connections. The recommended connectors are H&S Radox™ connectors, Amphenol H4, Multi Contact MC4. Suntech strongly recommends using the genuine connector type specified by Suntech's product data sheet. Any choice of a different connector type other than specified may void the warranty of the module.
- To ensure reliable electric connection and to prevent possible intrusion of humidity, H&S Radox™ integrated twist locking connectors have to be fully mated together and then manually twisted clockwise (a turn of around 90° shall be performed until the gap between the 2 connectors is closed), while two Amphenol H4 or two Multi Contact MC4 connectors must be mated and locked together until a click can be heard.
- Long-term exposure to wet environments may cause connectors' poor connectivity, resulting in current leakage and poor conductivity which voids the warranty. Suntech recommends proper connector/cable/wire management to prevent moisture intrusion. Depending on the amount of humidity, Suntech recommends periodic inspections of the installation system to maintain optimal module performance.
- The DC current generated by photovoltaic systems can be converted into AC and fed into a public Grid. As local utilities' policies on connecting renewable energy systems to the Grids vary from region to region. Always seek the advice from a qualified system designer or integrator. Building permits, inspections and approvals by the local utility are generally required.
- Especially for larger installations Suntech recommends lightning protection following the local requirements and regulations.
- When the installation is finished and after connection to the grid please do a professional hand over to the owner including an installation protocol is required. Provide a clear documentation of the system to the owner consisting of following minimum data such as: user guide, system layout, data sheets, performance expectations, electrical system data e.g. a copy of the installation test report following minimum requirements of IEC 62446 / IEC 60364-6.


Grounding

- For grounding and bonding requirements, please refer to regional and national safety and electricity standards. If grounding is required, use a recommended connector type for the grounding wire.
- For grounding, this guide refers to module frame grounding. If grounding is required, make sure module frames (metal exposed to touch) are always grounded.
- Suntech recommends always refer to local state and national code requirements for PV module grounding. Suntech highly recommends negative grounding if it's allowed by local authorities.


- When attaching the frame grounding hardware and wire to the frame it must be placed corresponding to the ground symbol stamped location to ensure proper electrical connection.
- Suntech recommends one of the following parts for grounding:
 - 1) Use WEEB-DPF to bond solar modules to module mounting brackets (grounding part is tested to UL467)



- Notice that WEEB teeth is positioned completely under the edge of the module frame.
- When position of solar module is finalized, torque fasteners to 20.5 N-m/15 ft-lb using general purpose anti-seize on threads.
- For more information, please contact supplier: BURNDY, <http://www.we-llc.com>
 - 2) Use Schletter clamps to bond solar module to module mounting brackets (grounding part is tested to UL467).

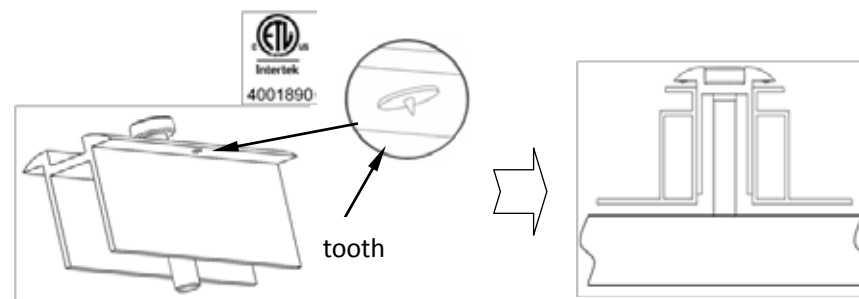

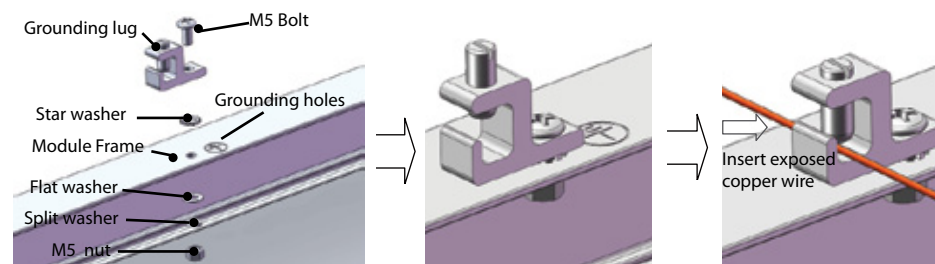- Recommend fastening torque is 20.5N-m/15 ft-lb.
- For more information, please contact supplier: Schletter, <http://www.solar.schletter.de>
 - 3) Use ILSCO grounding lug to bond solar modules to module mounting brackets (grounding part is tested to UL467, UL File E34440/E6207).



- When using the GBL-4DBT grounding lug, assemble the grounding lug to aluminum frame using stainless steel M5 screw and hardware as shown above. The star washer is fitted directly under the grounding lug and makes electrical contact by penetrating the anodized coating of the aluminum frame; the screw assembly a future fitted with a flat washer, then a split lock washer finally a nut to secure the entire assembly (see the picture above). Recommended M5 screw assembly torque is 1.5N-m. Next insert the ground wire (10-12 AWG exposed copper wire is recommended) to the feet of the lug, and screw down the slotted screw. Be careful not to damage the wire core.

- For more information, please contact supplier: ILSCO, <http://www.ilsco.com>

Maintenance

To ensure optimum module performance, Suntech recommends the following maintenance measures:

- Clean the module minimum once a year or more often when required depending of the pollution. Remove all organic from the surface. Module with soiling or contamination may reduce the power generation of the system. Always use clean water and a soft non-abrasive sponge or cloth for cleaning. A mild, non-abrasive cleaning agent may be used to remove stubborn dirt.
- Uncontrolled pollution is voiding the warranty or not cleaning the modules in time voids the warranty.
- Check the electrical, grounding and mechanical connections every six months to verify that they are clean, secure, undamaged and free of corrosion. Or else the warranty may be voided.
- In the event of a ground fault condition, NEVER wash or spray modules with water until ground fault has been identified, corrected by an authorized solar inverter service technician and the inverter is fully operational. This can cause electrocution or a serious safety issue.
- If any problem arises, consult a professional solar service providers for suggestions.
- Caution: observe solar manufacturers' maintenance instructions for all components used in the system, such as support frames, charging regulators, inverters, batteries etc.

Wuxi Suntech Power Co., Ltd.

Address: No.9 Xinhua Road, New District Wuxi, China 214028

Customer Service Hot Line: +86 400 8888 009 Fax: +86 510 8534 3321

E-mail: services@suntech-power.com, serviceUS@suntech-power.com

Or please contact our local representatives, details at www.suntech-power.com

T series - 1324 mm×992 mm×35 mm

Module	Optimum Operating Voltage (Vmp) at STC, (V dc)	Optimum Operating Current (Imp) at STC, (A dc)	Open Circuit Voltage (Voc) at STC, (V dc)	Short Circuit Current (Isc) at STC, (A dc)	Maximum Power (Pmax) at STC, (Watts)	Maximum System Voltage (IEC/UL)	Maximum Series Fuse Rating
STP225S-16/Tem	25.2	8.93	31.4	9.41	225	1000/600	20
STP220S-16/Tem	24.9	8.84	31.1	9.34	220	1000/600	20
STP215S-16/Tem	24.6	8.75	30.8	9.28	215	1000/600	20
STP210S-16/Tem	24.3	8.65	30.5	9.22	210	1000/600	20
STP205S-16/Tem	24.0	8.55	30.2	9.16	205	1000/600	20
STP200S-16/Tem	23.7	8.45	29.5	9.01	200	1000/600	20
STP185S-16/Tem	22.8	8.12	29.1	8.92	185	1000/600	20

W series - 1640 mm×992 mm×35 mm

Module	Optimum Operating Voltage (Vmp) at STC, (V dc)	Optimum Operating Current (Imp) at STC, (A dc)	Open Circuit Voltage (Voc) at STC, (V dc)	Short Circuit Current (Isc) at STC, (A dc)	Maximum Power (Pmax) at STC, (Watts)	Maximum System Voltage (IEC/UL)	Maximum Series Fuse Rating
STP290S-20/Web	31.7	9.15	39.8	9.55	290	1000/600	20
STP285S-20/Web	31.6	9.02	39.6	9.48	285	1000/600	20
STP280S-20/Web	31.5	8.89	39.4	9.41	280	1000/600	20
STP270S-20/Web	30.8	8.77	38.3	9.28	270	1000/600	20
STP265S-20/Web	30.5	8.69	38.1	9.22	265	1000/600	20
STP260S-20/Web	30.2	8.16	37.9	9.17	260	1000/600	20
STP295S-20/Wew	31.8	9.28	40.0	9.62	295	1000/600	20
STP290S-20/Wew	31.7	9.15	39.8	9.55	290	1000/600	20
STP285S-20/Wew	31.6	9.02	39.6	9.48	285	1000/600	20
STP275S-20/Wew	31.1	8.85	38.5	9.34	275	1000/600	20
STP270S-20/Wew	30.8	8.77	38.3	9.28	270	1000/600	20
STP265S-20/Wew	30.5	8.69	38.1	9.22	265	1000/600	20
STP260S-20/Wey	30.9	8.42	37.7	8.89	260	1000/600	20
STP255S-20/Wey	30.8	8.28	37.6	8.76	255	1000/600	20

W series - 1640 mm×992 mm×35 mm

Module	Optimum Operating Voltage (Vmp) at STC, (V dc)	Optimum Operating Current (Imp) at STC, (A dc)	Open Circuit Voltage (Voc) at STC, (V dc)	Short Circuit Current (Isc) at STC, (A dc)	Maximum Power (Pmax) at STC, (Watts)	Maximum System Voltage (IEC/UL)	Maximum Series Fuse Rating
STP260-20/Wd	30.9	8.42	37.7	8.89	260	1000/600	20
STP255-20/Wd	30.8	8.28	37.6	8.76	255	1000/600	20
STP250-20/Wd	30.7	8.15	37.4	8.63	250	1000/600	20
STP245-20/Wd	30.5	8.04	37.3	8.52	245	1000/600	20
STP240-20/Wd	30.2	7.95	37.2	8.43	240	1000/600	20
STP265S-20/Wd	31.0	8.55	37.8	9.01	265	1000/600	20
STP260S-20/Wd	30.9	8.42	37.7	8.89	260	1000/600	20
STP255S-20/Wd	30.8	8.28	37.6	8.76	255	1000/600	20
STP250S-20/Wd	30.7	8.15	37.4	8.63	250	1000/600	20
STP245S-20/Wd	30.5	8.04	37.3	8.52	245	1000/600	20
STP240S-20/Wd	30.2	7.95	37.2	8.43	240	1000/600	20
STP265S-20/Wdb	31.0	8.55	37.8	9.01	265	1000/600	20
STP260S-20/Wdb	30.9	8.42	37.7	8.89	260	1000/600	20
STP255S-20/Wdb	30.8	8.28	37.6	8.76	255	1000/600	20
STP250S-20/Wdb	30.7	8.15	37.4	8.63	250	1000/600	20
STP245S-20/Wdb	30.5	8.04	37.3	8.52	245	1000/600	20
STP240S-20/Wdb	30.2	7.95	37.2	8.43	240	1000/600	20
STP235S-20/Wdb	30.2	7.79	37.0	8.35	235	1000/600	20
STP260-20/Wds	30.9	8.42	37.7	8.89	260	1000/600	20
STP255-20/Wds	30.8	8.28	37.6	8.76	255	1000/600	20
STP250-20/Wds	30.7	8.15	37.4	8.63	250	1000/600	20
STP245-20/Wds	30.5	8.04	37.3	8.52	245	1000/600	20
STP240-20/Wds	30.2	7.95	37.2	8.43	240	1000/600	20
STP265-20/Wem	31.0	8.56	37.8	9.02	265	1000/600	20
STP260-20/Wem	30.9	8.42	37.7	8.89	260	1000/600	20
STP255-20/Wem	30.8	8.28	37.6	8.76	255	1000/600	20
STP250-20/Wem	30.7	8.15	37.4	8.63	250	1000/600	20
STP295S-20/Wem	31.8	9.28	40.0	9.62	295	1000/600	20
STP290S-20/Wem	31.7	9.15	39.8	9.55	290	1000/600	20
STP285S-20/Wem	31.6	9.02	39.6	9.48	285	1000/600	20
STP275S-20/Wem	31.1	8.85	38.5	9.34	275	1000/600	20
STP270S-20/Wem	30.8	8.77	38.3	9.28	270	1000/600	20
STP265S-20/Wem	30.5	8.69	38.1	9.22	265	1000/600	20
STP260S-20/Wem	30.2	8.61	37.9	9.17	260	1000/600	20
STP270-20/Wee+	31.1	8.69	37.9	9.15	270	1000/600	20
STP265-20/Wee+	31.0	8.56	37.8	9.02	265	1000/600	20
STP260-20/Wee+	30.9	8.42	37.7	8.89	260	1000/600	20

V series - 1956 mm×992 mm×40 mm

Module	Optimum Operating Voltage (Vmp) at STC, (V dc)	Optimum Operating Current (Imp) at STC, (A dc)	Open Circuit Voltage (Voc) at STC, (V dc)	Short Circuit Current (Isc) at STC, (A dc)	Maximum Power (Pmax) at STC, (Watts)	Maximum System Voltage (IEC/UL)	Maximum Series Fuse Rating
STP310-24/Ve	36.5	8.50	44.9	8.96	310	1000/600	20
STP305-24/Ve	36.2	8.43	44.7	8.89	305	1000/600	20
STP300-24/Ve	35.9	8.36	44.5	8.83	300	1000/600	20
STP295-24/Ve	35.6	8.29	44.3	8.74	295	1000/600	20
STP290-24/Ve	35.4	8.20	44.1	8.65	290	1000/600	20
STP310-24/Vd	36.5	8.50	45.4	8.85	310	1000/600	20
STP305-24/Vd	36.3	8.41	45.3	8.74	305	1000/600	20
STP300-24/Vd	36.1	8.32	45.2	8.65	300	1000/600	20
STP295-24/Vd	35.7	8.27	45.1	8.57	295	1000/600	20
STP290-24/Vd	35.6	8.15	45.0	8.42	290	1000/600	20
STP285-24/Vd	35.4	8.06	44.9	8.37	285	1000/600	20
STP280-24/Vd	35.2	7.95	44.8	8.33	280	1000/600	20
STP275-24/Vd	35.1	7.84	44.7	8.26	275	1000/600	20
STP270-24/Vd	35.0	7.71	44.5	8.20	270	1000/600	20
STP260-24/Vd	34.8	7.47	44.0	8.09	260	1000/600	20
STP320-24/Vem+	37.1	8.63	45.6	9.14	320	1000/600	20
STP315-24/Vem+	36.8	8.56	45.1	9.02	315	1000/600	20
STP310-24/Vem+	36.5	8.50	44.9	8.96	310	1000/600	20
STP315-24/Vem	36.8	8.56	45.1	9.02	315	1000/600	20
STP310-24/Vem	36.5	8.50	44.9	8.96	310	1000/600	20
STP305-24/Vem	36.2	8.43	44.7	8.89	305	1000/600	20
STP300-24/Vem	35.9	8.36	44.5	8.83	300	1000/600	20
STP340S-24/Vem	37.7	9.02	46.4	9.51	340	1000/600	20
STP325S-24/Vem	37.1	8.77	45.8	9.28	325	1000/600	20
STP320S-24/Vem	36.9	8.69	45.6	9.21	320	1000/600	20